

Turning off Railcom with the LH100

Step by Step Instructions

1. Start from where your display shows "L· XXXX" or "E· XXXX". ("X" represents any digit.)
2. Go into OPS Mode Programming (Programming on the Main).
Press the "F" Key, then press the "+" key until "POM" appears on the display.
3. Press the "ENTER" key. "CV" should appear on the display.
4. Press the "ENTER" key again. "C· _ _" should appear on the display.
5. Press the "7" key. "C·7· _ _" should appear on the display.
6. Press the "ENTER" key. "C 7· _ _" should appear on the display.
7. Press the "5" key, then the "0" key, then the "ENTER" key. "C 7· 50" should appear on the display.
8. Press the "CL" key. The "50" should disappear from the display.
9. Press the "9" and the "2" keys, then the "ENTER" key. "C 7· 92" should appear on the display.
10. Press the "ENTER" key.
11. Press the "ESC" key four (4/4) times. The display should return to where it was when you started, i.e., "L· XXXX" or "E· XXXX".

John Licharson
TLA Custom Models
187 Simmons Road, Village of Wilton
RR#2
Odessa P.O., Ontario
K0H 2H0
Canada
613-386-7720